



FA241-9 (9VDC) Frequency Agile™ 900MHz OEM Transmitter

User Manual


Additional **Frequency Agile™** wireless products from **Inovonics** include:

FA241-3	3VDC OEM transmitter
FA401	single-channel slave receiver
FA403	serial receiver with RS232 serial port
FA416D	16 transmitter, 4 output slave receiver
FA464DR	64 transmitter, 16 relay slave receiver

Inovonics Corporation
2100 Central Avenue
Boulder CO 80301
(800) 782-2709

LIT-FA241V9-USER v1.00 9-Nov-98

FA241-9 OEM Transmitter

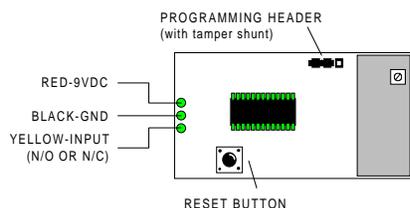

FA241-9 Programming

1. Use the shortest possible wiring run when connecting power to the transmitter.
2. When prompted to plug in transmitter, remove shunt from programming header and connect cable from programming device to programming header on transmitter.
3. Press reset button on transmitter.
4. When programming is complete, disconnect cable and replace tamper shunt.

NOTE: The FA241 retains programming data in non-volatile memory. It does not require re-programming after loss of power. Press reset button to re-initialize the transmitter and restore programming.



FA241-9 (9VDC) Frequency Agile™ 900MHz OEM Transmitter

User Manual


Additional **Frequency Agile™** wireless products from **Inovonics** include:

FA241-3	3VDC OEM transmitter
FA401	single-channel slave receiver
FA403	serial receiver with RS232 serial port
FA416D	16 transmitter, 4 output slave receiver
FA464DR	64 transmitter, 16 relay slave receiver

Inovonics Corporation
2100 Central Avenue
Boulder CO 80301
(800) 782-2709

LIT-FA241V9-USER v 1.00 9-Nov-98

FA241-9 OEM Transmitter

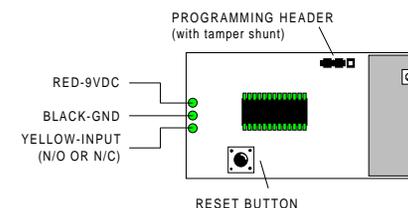

FA241-9 Programming

1. Use the shortest possible wiring run when connecting power to the transmitter.
2. When prompted to plug in transmitter, remove shunt from programming header and connect cable from programming device to programming header on transmitter.
3. Press reset button on transmitter.
4. When programming is complete, disconnect cable and replace tamper shunt.

NOTE: The FA241 retains programming data in non-volatile memory. It does not require re-programming after loss of power. Press reset button to re-initialize the transmitter and restore programming.