





The Inovonics temperature/humidity transmitter is designed for harsh environments, where condensation, frost, temperature, or humidity fluctuations are a concern. The temperature/humidity transmitter requires the remote ACC710 sensor.

### **Product Features**

| Transmits temperature and humidity periodically and upon significant change  |
|--|
| Measurement range: -4 to 140°F (-20 to 60°C) and 0 to 100% relative humidity |
| Typical accuracy of 0.5°F (0.3°C) and 2.0% relative humidity                 |

| Product | Specifications |
|---------|----------------|
|         |                |

| Dimensions:                 | 3.5" x 1.7" x 0.9" (8.9 x 4.3 x 2.3 cm )  |
|-----------------------------|---|
| Weight:                     | 1.9 oz. (54 g)  |
| Typical battery life:       | 8 years at a 5 minute transmission interval   |
| Internal battery type:      | Panasonic CR123A  |
| Compatibility requirements: | Must be used with the Inovonics EN4000 serial receiver, EN4080 IP gateway or EN6040 network coordinator; requires an application designed to support advanced functionality |
| Sensor measurement          |   |

# Sensor measurement temperature:

| Typical accuracy:   | ±0.5°F at 77°F (25°C)     |
|---------------------|---------------------------|
| Typical resolution: | 0.018°F                   |
| Range:              | -4 to 140°F (-20 to 60°C) |
| Units:              | Fahrenheit or Celsius     |

#### Sensor measurement humidity:

| Range:                | 0 to 100%RH               |
|-----------------------|---------------------------|
| Typical resolution:   | 0.03%RH                   |
| Typical accuracy:     | ±2.0%RH from 10% to 90%RH |
| Transmitter enerating |                           |

## Transmitter operating environment:

| Temperature: | -4 to 140°F (-20 to 60°C)  |
|--------------|----------------------------|
| Humidity:    | Up to 90% (non-condensing) |

#### Sensor operating environment:

| Temperature:              | -4 to 140°F (-20 to 60°C) |
|---------------------------|---------------------------|
| Humidity:                 | Water resistant           |
| Transmitter configuration |                           |

## options:

| Measurement interval:  | 0.5, 1, 5, or 30 seconds, 1, 5, or 15 minutes, or only on transmit |
|------------------------|--|
| Transmission interval: | 10 or 30 seconds, 1, 2, 5, 10, 15 or 30 minutes                    |

| Delta T: 0.5, 1, 5, or 10 degrees or % resistance (Delta T can |  |
|--|--|
| disabled)  |  |

## **Product Specifications**

| Market:                  | North America, Australia, New Zealand          |
|--------------------------|--|
| EchoStream® frequency:   | 902-928 MHz, frequency hopping spread spectrum |
| Check-in time frequency: | 5 minutes                                      |
| Regulatory compliance:   | FCC, ISED, RCM, RoHS                           |

#### Reference Materials (available at www.inovonics.com)


EN1722 Temperature/Humidity Transmitter Installation Instructions

EchoStream Developer Guide

Inovonics Product Catalog: North America

- The range and performance of any wireless product depends on the structure and environment in which it
  operates.
- Continual enhancements to our products may cause specifications to change without notice.
- Patents: 7,154,866; 7,554,932; 7,746,804; others pending.
- Inovonics supports recycling and reuse whenever possible. Please recycle these parts using a certified electronics recycler.

#### Inputs

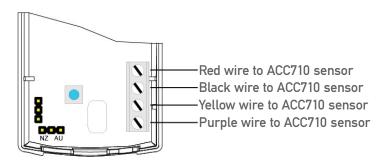

#### Technical documents

For technical documents visit us at http://www.inovonics.com/support/ tech-documents/ or use the QR code below.



## Mounting plate



The transmitter mounting plate hinges to the transmitter. Just mount the plate and snap the transmitter in place.