

EN1941 Family One-Way Binary RF Module Installation and Operation Manual

1 Overview

EchoStream RF modules are designed to be easily interfaced with your electronic remote application controller (RAC), allowing the assimilation of any user-specific application into an EchoStream system. Once integrated with existing products, RF modules provide you with complete EchoStream functionality.

One-way binary RF modules are end-devices that use a logic-level connection to interface with your RAC.



Figure 1 One-way system components

The one-way binary RF module is available in the following configurations:

Part #	Check-In
EN1941	3 minutes
EN1941-60	60 minutes

The one-way binary RF module is available in North America, Australia and New Zealand; the radio frequency band has been configured for the appropriate geographic area at the factory.

Note: For UL 2560 installations, refer to the *EN6080 Area Control Gateway Installation Instructions* or *EN6040-T Network Coordinator Installation Instructions*.

1.1 Maximum Number of Repeaters for a UL 2560 Installation

To achieve the 99.99% alarm message reliability required for UL 2560 compliance, system installations must operate within the following limits for end device and repeater counts.

End Devices	Maximum Repeaters
150	397
250	386
350	375
500	360
1000	313
2000	238
3000	184

1.2 Inovonics Wireless Contact Information

 For product and installation videos visit us at www.inovonics.com/videos or use the QR code below.



If you have any problems with this procedure, contact Inovonics Wireless technical services:

- E-mail: support@inovonics.com.
- Phone: (800) 782-2709; (303) 939-9336.

1.3 Installation Notes

- These products are designed to be installed and maintained by professional security technicians.
- Products are intended for indoor use.
- Manually test all products weekly.

2 One-Way Binary RF Module Components

The EN1941 is a universal one-way binary RF module with two alarm input pins, allowing the use of dual inputs. Input one is the primary alarm, bit 0; input two is the secondary alarm, bit 1.

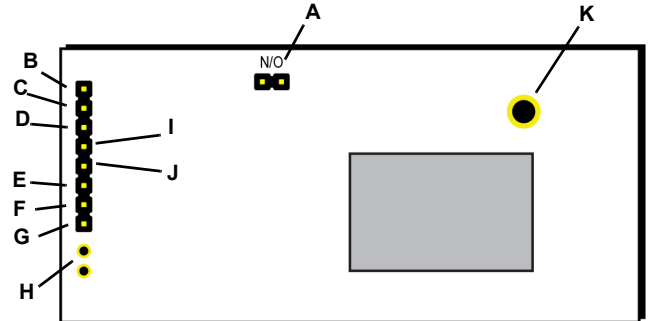


Figure 2 One-way binary RF module components

- | | | |
|-----------------------------|------------------------|-----------------------|
| A N/O selection pins | B Reserved | C Reserved |
| D Secondary alarm | E Power | F Ground |
| G Primary alarm | H LED contacts | I Tamper input |
| J Reset input | K Mounting hole | |

N/O selection pins Place a jumper to select normally open inputs; remove the jumper to select normally closed.

Note: The EN1941 is shipped with the jumper unattached. With the jumper unattached, the EN1941 defaults to normally closed.

Secondary alarm Connects a secondary end-device to provide RF alarm data for any user-specific application.

Primary alarm Connects a primary end-device to provide RF alarm data for any user-specific application.

Tamper input Connects a tamper input to send a message when user-specific end-device is tampered with.

Reset input Connects a reset input to reset the one-way binary RF module after a frequency band selection change or N/O - N/C selection change, and to initiate an RF transmission.

Power Connect power cabling to an external power supply of 2.6 to 5.5 volts.

Ground Connects to ground.

Mounting hole Used to mount the one-way binary RF module to the user-specific product. The mounting hole should only be used with a nylon standoff, never metal.

LED contacts Use to control an LED switch. Not designed to drive LED power.

3 One-Way Binary RF Module Dimensions

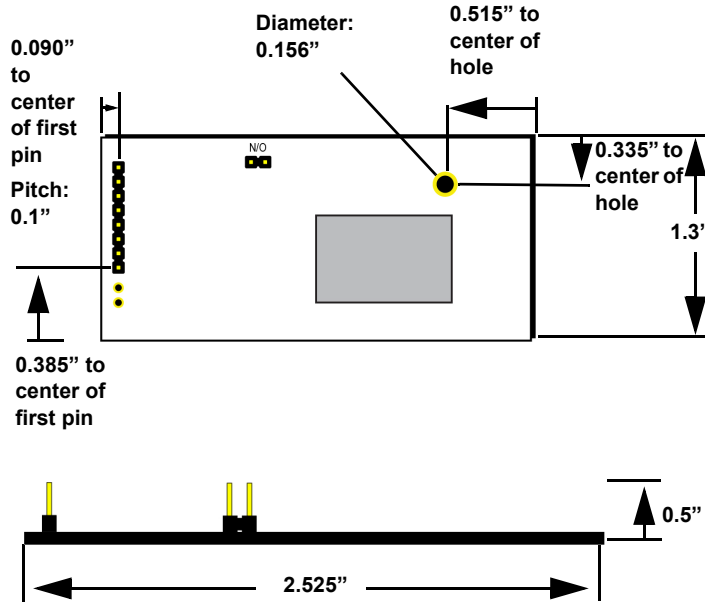


Figure 3 One-Way binary RF module dimensions

4 One-Way Binary RF Module Connections and Output Jumpers

	Connection	Output Jumper N/O	Output Jumper N/C
Primary Alarm	Open	Alarm Clear	Alarm
	Ground	Alarm	Alarm Clear
Secondary Alarm	Open	Alarm Clear	Alarm
	Ground	Alarm	Alarm Clear
Tamper	Open	Alarm	Alarm
	Ground	Alarm Clear	Alarm Clear
Reset	Open for normal operation; connect to the ground and release for a board reset.		

5 Installation Notes

- One-way binary RF modules are designed to be easily interfaced with your electronic remote application controller, however integration must conform to the following:
 - The RF module must only be connected at the eight pin header or eight pin plated through-holes.
 - All cables and wires must be routed away from the component side of the RF module.
 - The integrated antenna must not be tampered with; no connection to an alternate antenna is provided.
 - The application module must not include an integrated secondary collocated radio module.
 - The one-way binary RF module antenna should be placed so that it is facing away, or otherwise isolated from, your device's ground plane.
 - Components that are sensitive to RF transmission, such as high gain circuits, should be isolated from the antenna to prevent interference.
 - One-way binary RF modules should not be mounted on metal surfaces or inside metal enclosures. They should also not be mounted where sheet metal ductwork, wire mesh screens, etc. might block transmissions.

6 One-Way Binary RF Module Requirements

6.1 Power Requirements

The one-way binary RF module has an on-board voltage regulator. Connect power cabling to an external power supply (Vcc) of 2.6 to 5.5 volts. Voltage must be sustained at 2.6 volts or above and supply 100 milliamps during the transmit cycle.

	EN1941	EN1941-60
Check-In Interval	3 minutes	60 minutes
Average Current Draw, Based on One Alarm Message per Day on Average	32 uA	5 uA
Peak Transmitted Current	Less than 100 mA	Less than 100 mA
Increase in Average Current for Alarm/Restore Cycle, Based on One per Hour	15 uA	15 uA

Note: For UL 2560 installations, transmitters must have a minimum check-in time of 60 minutes.

6.2 Low Battery Condition

The one-way binary RF module measures battery voltage every three and a half hours, and, when the battery measures 2.6 volts, a serial message is sent indicating a low battery condition.

6.3 Temperature range

-20°C to +60°C, non-condensing

6.4 RF network compatibility

EchoStream commercial mesh network.

6.5 Input Requirements

Caution: Input levels must not exceed 3.3 V.

Open When an active source (open collector or dry contact) is used to drive the alarm or tamper input, the voltage should be between 0.75xVcc and Vcc. A passive input should have an impedance of greater than 5.1k ohm between the input and ground.

Closed When an active source is used, the voltage should be less than 0.25xVcc. A passive input should have an impedance of less than 240 ohm.

6.6 LED Requirements

The LED output is an active output from the microprocessor, with a 1k series resistor to limit current draw. Default state is low, and the LED pin is pulled high during transmit.

7 Compliance Requirements

7.1 UL and cUL Requirements

The module holds a UL and cUL Recognized Component Mark and is intended to be factory installed in another device, system or end-product. The suitability of the module for use in a UL and/or cUL listed (certified) device, system or end-product, is restricted as follows:

- The EN1941 was evaluated as a UL/cUL Recognized Component compliant to selected requirements from UL639, ULC-S306-03, UL1076, ULC/ORD-C1076 and UL1610 as specified in the Conditions of Acceptability of the UL Report.
- The Supply Line Transient tests shall be added to the RAC UL evaluation program if it is powered by an AC/DC adapter rather than a low voltage battery.
- If intended use includes UL1610, UL1076 or UL639 installations, the RAC shall be evaluated for Short Range RF Device tests.
- Compatible UL receivers (except for UL 2560) include EN4216MR, EN4232MR and EN7285. Refer to the *EN4216MR Installation and Operation Manual*, the *EN4232MR Installation and Operation Manual* or the *EN7285 Installation Instructions*.
- The EN1941-60 is a UL2560 unlisted component.

- The compatible receivers for UL 2560 installations are the EN6080 area control gateway and EN6040-T network coordinator. Refer to the *EN6080 Area Control Gateway Installation Instructions* and the *EN6080 Area Control Gateway User Manual*, or the *EN6040-T Network Coordinator Installation Instructions*.
- The compatible repeater for UL 2560 installations is the EN5040-20T.
- When selecting frequency band, only devices set for use in North America are configured for UL and cUL installations.
- In a UL 2560 installation, the EN1941-60 one-way binary RF module may be used with completed emergency call systems for assisted living and independent living facilities
- For UL 2560 certified system installations, the following Inovonics EchoStream devices are approved for installation within maximum system configuration limits defined in section 1.1 of this document:
 - EN6080 area control gateway or EN6040-T network coordinator.
 - EN5040-20T high power repeater.
 - End devices (transmitters) with a minimum 60-minute check-in interval, as follows:
 - Fundamental devices which are subject to UL2560 certification (pendant transmitters and OEM products using the Inovonics RF module)
 - Supplemental devices which are not subject to UL2560 system certification but which may be used within a UL2560 certified system (e.g. universal transmitters and activity sensors)
- Users that have achieved certification and will install UL 2560 certified systems are responsible for labeling all fundamental devices with the UL 2560 system certification mark.

7.2 FCC Requirements for the RF Module

The one-way binary RF module has received a Modular Grant to FCC/IC regulations. The integrator is responsible to test the final installation to verify compliance to FCC/IC regulation for unintentional emissions. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The integrator is responsible for properly labeling the product containing the one-way binary RF module. Labels must be placed on the outside of the product, and must include a statement indicating that the product contains the module, along with the FCC and IC number.

Example 1 "Contains One-Way Binary RF Module

FCC ID: HCQ3B6T; IC ID: 2309A-T"

Example 2 "Contains FCC ID: HCQ3B6T; IC ID: 2309A-T"

8 Television and Radio Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

9 FCC Part 15 and Innovation, Science and Economic Development Canada (ISED) Compliance

This device complies with part 15 of the FCC Rules, and ISED license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

10 Radiation Exposure Limits

10.1 FCC

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm during normal operation and must not be co-located or operating in conjunction with any other antenna or transmitter.

10.2 ISED

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme avec ISED RSS-102 des limites d'exposition aux rayonnements définies pour un environnement non contrôlé. Cet émetteur doit être installé à au moins 20 cm de toute personne et ne doit pas être colocalisé ou fonctionner en association avec une autre antenne ou émetteur.