

EN1941-60XHR One-Way Binary RF Module without Header

Installation and Operation Manual

1 Overview

EchoStream RF modules are designed to be easily interfaced with your electronic remote application controller (RAC). RF modules allow the assimilation of any user-specific application into an EchoStream system. Once integrated with existing products, RF modules provide you with complete EchoStream functionality.

One-way binary RF module without headers are end-devices that use a logic-level connection to interface with your RAC. EN1941-60XHR one-way binary RF module without headers can be used in either one-way or two-way EchoStream systems.



Figure 1 One-Way System Components

Note: For UL 2560 installations, refer to the *EN6080 Area Control Gateway Installation Instructions* or *EN6040-T Network Coordinator Installation Instructions*.

1.1 Maximum Number of Repeaters for a UL 2560 Installation

To achieve the 99.99% alarm message reliability required for UL 2560 compliance, system installations must operate within the following limits for end device and repeater counts.

End Devices	Maximum Repeaters
150	397
250	386
350	375
500	360
1000	313
2000	238
3000	184

1.2 Inovonics Wireless Contact Information

For product and installation videos visit us at www.inovonics.com/videos or use the QR code below.



If you have any problems with this procedure, contact Inovonics Wireless technical services:

- E-mail: support@inovonics.com.
- Phone: (800) 782-2709; (303) 939-9336.

1.3 Installation Notes

- These products are designed to be installed and maintained by professional security technicians.
- Products are intended for indoor use.
- Manually test all products weekly.

2 One-Way Binary RF Module without Header Components

The EN1941-60XHR is a universal one-way binary RF module without header, and with two alarm input pins, allowing the use of dual inputs. Input one is the primary alarm, bit 0; input two is the secondary alarm, bit 1.

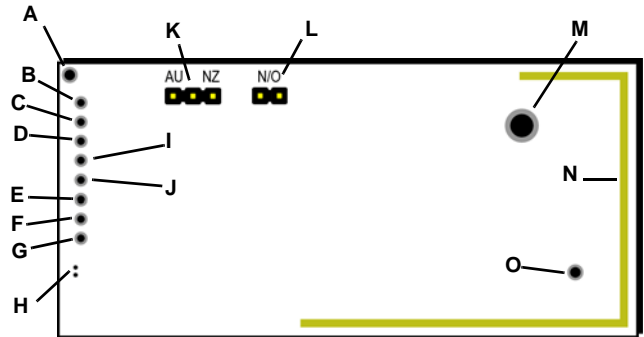


Figure 2 One-Way Binary RF Module without Header Components

- | | | |
|----------------------------|---------------------------------|----------------------------|
| A Board stabilization hole | B Reserved | C Reserved |
| D Secondary alarm | E Power | F Ground |
| G Primary alarm | H LED contacts | I Tamper input |
| J Reset input | K Frequency band selection pins | L N/O selection pins |
| M Mounting hole | N On-board antenna | O Board stabilization hole |

Frequency band selection pins: Place a jumper to select the frequency band for your geographic area.

- Place the jumper on the left two pins to select 915-928 MHz for Australia.
- Place the jumper on the right two pins to select 921-928 MHz for New Zealand.
- Leave the jumper off the pins to select 902-928 MHz for North America.

N/O selection pins: Place a jumper to select normally open inputs; remove the jumper to select normally closed.

Note: The EN1941-60XHR is shipped with the jumper unattached. With the jumper unattached, the EN1941-60XHR defaults to normally closed.

Secondary alarm: Connects a secondary end-device to provide RF alarm data for any user-specific application.

Primary alarm: Connects a primary end-device to provide RF alarm data for any user-specific application.

Tamper input: Connects a tamper input to send a message when user-specific end-device is tampered with.

Reset input: Connects a reset input to reset the one-way binary RF module without header after a frequency band selection change or N/O - N/C selection change, and to initiate an RF transmission.

Power: Connect power cabling to an external power supply of 2.4 to 5.5 volts.

Ground: Connects to ground.

Mounting hole: Used to mount the one-way binary RF module without header to the user-specific product. The mounting hole should only be used with a nylon standoff, never metal.

LED contacts: Use to control an LED switch. Not designed to drive LED power.

Board stabilization holes: Used to mount and stabilize the board. The board stabilization holes should only be used with non-metal standoffs.

3 One-Way Binary RF Module without Header Dimensions

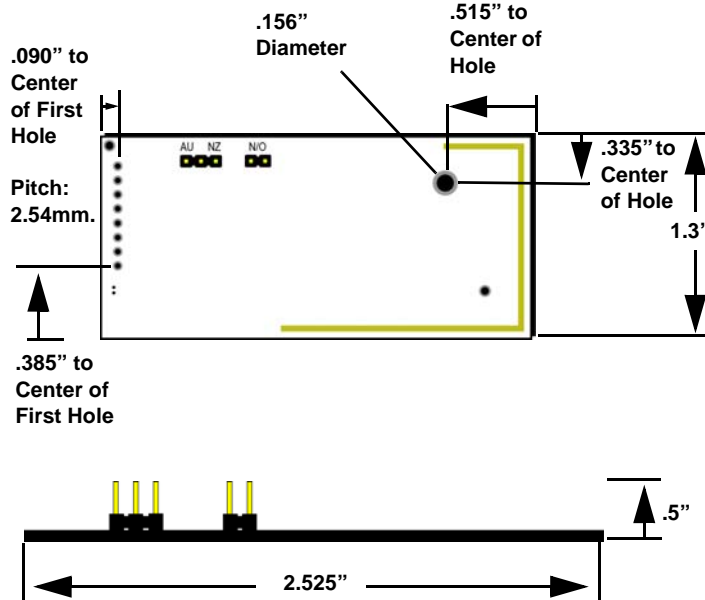


Figure 3 EN1941-60XHR One-Way Binary RF Module without Header Dimensions

4 One-Way Binary RF Module without Header Connections and Output Jumpers

	Connection	Output Jumper N/O	Output Jumper N/C
Primary Alarm	Open	Alarm Clear	Alarm
	Ground	Alarm	Alarm Clear
Secondary Alarm	Open	Alarm Clear	Alarm
	Ground	Alarm	Alarm Clear
Tamper	Open	Alarm	Alarm
	Ground	Alarm Clear	Alarm Clear
Reset	Open for normal operation; connect to the ground and release for a board reset.		

5 Installation

- A Connecting the one-way binary RF module without header.
- B One-way binary RF module without headers are designed to be easily interfaced with your electronic remote application controller, however integration must conform to the following:
- C The RF module must only be connected at the eight pin plated through-holes.
- D All cables and wires must be routed away from the component side of the RF module.
- E The integrated antenna must not be tampered with; no connection to an alternate antenna is provided.
- F The application module must not include an integrated secondary collocated radio module.
- G The one-way binary RF module without header antenna should be placed so that it is facing away, or otherwise isolated from, your device's ground plane.
- H Components that are sensitive to RF transmission, such as high gain circuits, should be isolated from the antenna to prevent interference.
- I One-way binary RF module without headers should not be mounted on metal surfaces or inside metal enclosures. They should also not be mounted where sheet metal ductwork, wire mesh screens, etc. might block transmissions.

- J The RF module should be integrated so the antenna is unobstructed by the end user's PCB, batteries, or any other conductive material.

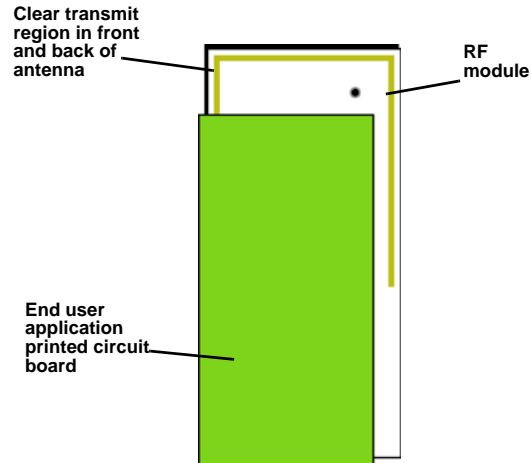


Figure 4 The RF module should be integrated so the antenna is unobstructed

6 One-Way Binary RF Module without Header Requirements

6.1 Power Requirements

The EN1941-60XHR has an on-board voltage regulator. Connect power cabling to an external power supply (Vcc) of 2.4 to 5.5 volts. Voltage must be sustained at 2.4 volts or above and supply 100 milliamps during the transmit cycle.

Assuming check-in messages every sixty minutes and infrequent alarm messages (one per day, on average), the average current draw is 1.67 uA; peak current draw while transmitting is less than 100 mA; one alarm/restore cycle per hour results in about 16.67 uA increase in average current. EN1941-60XHR transmitters send a check-in message every 60 minutes;

Note: For UL 2560 installations, transmitters must have a minimum check-in time of 60 minutes.

6.2 Low Battery Condition

The EN1941-60XHR measures battery voltage every three and a half hours, and, when the battery measures 2.4 volts, a serial message is sent indicating a low battery condition.

6.3 Temperature range

-20°C to +60°C, non-condensing

6.4 RF network compatibility

EchoStream Commercial Mesh Network

6.5 Input Requirements

Caution: Input levels must not exceed 3.3 V.

Open When an active source (open collector or dry contact) is used to drive the alarm or tamper input, the voltage should be between 0.75xVcc and Vcc. A passive input should have an impedance of greater than 5.1k ohm between the input and ground.

Closed When an active source is used, the voltage should be less than 0.25xVcc. A passive input should have an impedance of less than 240 ohm.

6.6 LED Requirements

The LED output is an active output from the microprocessor, with a 1k series resistor to limit current draw. Default state is low, and the LED pin is pulled high during transmit.

7 Compliance Requirements

7.1 UL and cUL Requirements

- The EN1941-60XHR is a UL2560 unlisted component.
- The compatible receivers for UL 2560 installations are the EN6080 area control gateway and EN6040-T network coordinator. Refer to the *EN6080 Area Control Gateway Installation Instructions* and the *EN6080 Area Control Gateway User Manual*, or the *EN6040-T Network Coordinator Installation Instructions*.
- The compatible repeater for UL 2560 installations is the EN5040-20T.
- When selecting frequency band, only devices set for use in North America are configured for UL and cUL installations.
- In a UL 2560 installation, the EN1941-60XHR one-way binary RF module without header may be used with completed emergency call systems for assisted living and independent living facilities
- For UL 2560 certified system installations, the following Inovonics EchoStream devices are approved for installation within maximum system configuration limits defined in section 1.1 of this document:
 - EN6080 area control gateway or EN6040-T network coordinator.
 - EN5040-20T high power repeater.
 - End devices (transmitters) with a minimum 60-minute check-in interval, as follows:
 - Fundamental devices which are subject to UL2560 certification (pendant transmitters and OEM products using the Inovonics RF module)
 - Supplemental devices which are not subject to UL2560 system certification but which may be used within a UL2560 certified system (e.g. universal transmitters and activity sensors)
- Users that have achieved certification and will install UL 2560 certified systems are responsible for labeling all fundamental devices with the UL 2560 system certification mark.

7.2 FCC Requirements for the RF Module

The one-way binary RF module without header has received a Limited Modular Grant, requiring Inovonics to retain control of the final installation to ensure compliance to FCC/IC regulations. The integrator is responsible to test the final installation to verify compliance to FCC/IC regulation for unintentional emissions. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Prior to marketing the product, the integrator must complete and submit to Inovonics a compliance review form and documentation, and, if requested, a functional product sample for approval. If this is not possible, the integrator must perform the testing themselves and submit proof to Inovonics of compliance to Part 15 of the FCC Rules and Industry Canada RSS-210.

At the end of this guide is an Inovonics compliance review form to be filled out by the integrator.

The integrator is also responsible for properly labeling the product containing the one-way binary RF module without header. Labels must be placed on the outside of the product, and must include a statement indicating that the product contains the module, along with the FCC and IC number.

Example 1 "Contains One-Way Binary RF Module without Header
FCC ID: HCQ3B6OT9OEM; IC ID: 2309A-OT9OEM (EN1941-IC)"

Example 2 "Contains FCC ID: HCQ3B6OT9OEM; IC ID: 2309A-OT9OEM (EN1941-IC)"

7.3 Television and Radio Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

8 FCC Part 15 and Industry Canada Compliance

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

9 US Patent Numbers

- 7,154,866.
- 7,554,932.
- 7,746,804.
- Other patents pending.

Inovonics One-Way Binary RF Module without Header Compliance Review Form

Please provide the following information for review of final installation to ensure compliance with FCC/IC regulations:

Required materials from integrator

The following must also be attached for review with this form:

- A description of the final installation, with attached photographs, as necessary
- The unintentional radiator test report indicating compliance

Integrator information

First name:	Last name:
Phone number:	Email address:
Address:	
Declaration of conformity to Inovonics' installation instructions:	
Submitted materials:	
Authorized signature:	Submission date:

Inovonics contact information

Inovonics
ATTN: Product Management
397 South Taylor Ave.
Louisville, CO 80027
Phone: 303.939.9336
Toll-Free: 800.782.2709
Fax: 303.939.8977
productmanagers@inovonics.com

Required materials from Inovonics

- The record of product sample review and test, as necessary

Inovonics approval

First name:	Last name:
Phone number:	Email address:
Approval status (pass, fail, samples required, compliance testing required, compliance test report required):	
Approval comments:	
Submitted materials:	
Returned materials:	
Authorized signature:	Approval date: