

1 Overview

The EN2242 three-condition duress card provides the ability to send up to three alarm conditions, and allows you to accurately locate employees in near real time.

For full product and installation information, including regulatory requirements, see the *EN2242 Installation and Operation Manual* available at inovonics.com.

All product documentation is available at <https://www.inovonics.com/resources/technical-documents/> or by using the QR code below.




2 Button Layout

Your duress card has two buttons:

- Button 1 (left button).

Button 2 (right button).

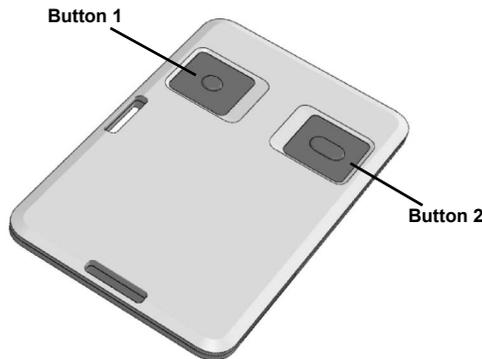

3 Activate Your Duress Card

Follow these steps to wake up your duress card from sleep mode:

Note: Once activated, your duress card stays active until the battery depletes. It transmits your location every 25 seconds unless RTLS is disabled.

1. Press either button to wake the card.
 - The LED will blink green for 20 seconds.
2. Press button 1 three times within 2 seconds during the 20-second window to confirm.
 - A green flash means success. A red flash means the card went back to sleep, in which case repeat the process.

4 Register with Your System

You must register the duress card with your system for monitoring. Each card has a unique ID number. During registration, you may need to reset the card:

Refer to your control panel instructions for complete registration details. The following will reset the device:

1. Enter menu mode by holding button 1 and pressing button 2 three times.
 - The LED will flash green rapidly at first, then slow.
2. While in menu mode, press button 2 three times.
 - The LED will flash green rapidly, indicating the duress card has reset.

5 How to Wear the Duress Card

Wear the duress card on a lanyard with the button side facing out for easy access.

6 Send Alarm Conditions

Note: When an alarm is sent, the LED blinks to show the signal is transmitting. Test your duress card at least once per week.

Your duress card can send three different alarm conditions:

- First condition: Press and hold button 1 for 1 second.
- Second condition: Press and hold button 2 for 1 second.
- Third condition: Press and hold both buttons together for 1 second.

7 Quick Reference Table

Action	Button Combination	LED Indicator
Confirm exit sleep mode.	Press button 1 three times within 2 seconds.	Green flash = success; red flash = failed.
Enter menu mode.	Holding button 1, press button 2 three times.	Rapid green flash, then slower green flash.
Reset device.	While in menu mode, press button 2 three times.	Rapid green flash, then device resets.
Toggle RTLS mode. (RTLS is enabled by default).	While in menu mode, hold button 2 for 3 seconds.	Rapid green flash, then device exits menu mode.
Enter sleep mode.	While in menu mode, press button 1 three times.	Rapid green LED flash duress card enters sleep mode.