


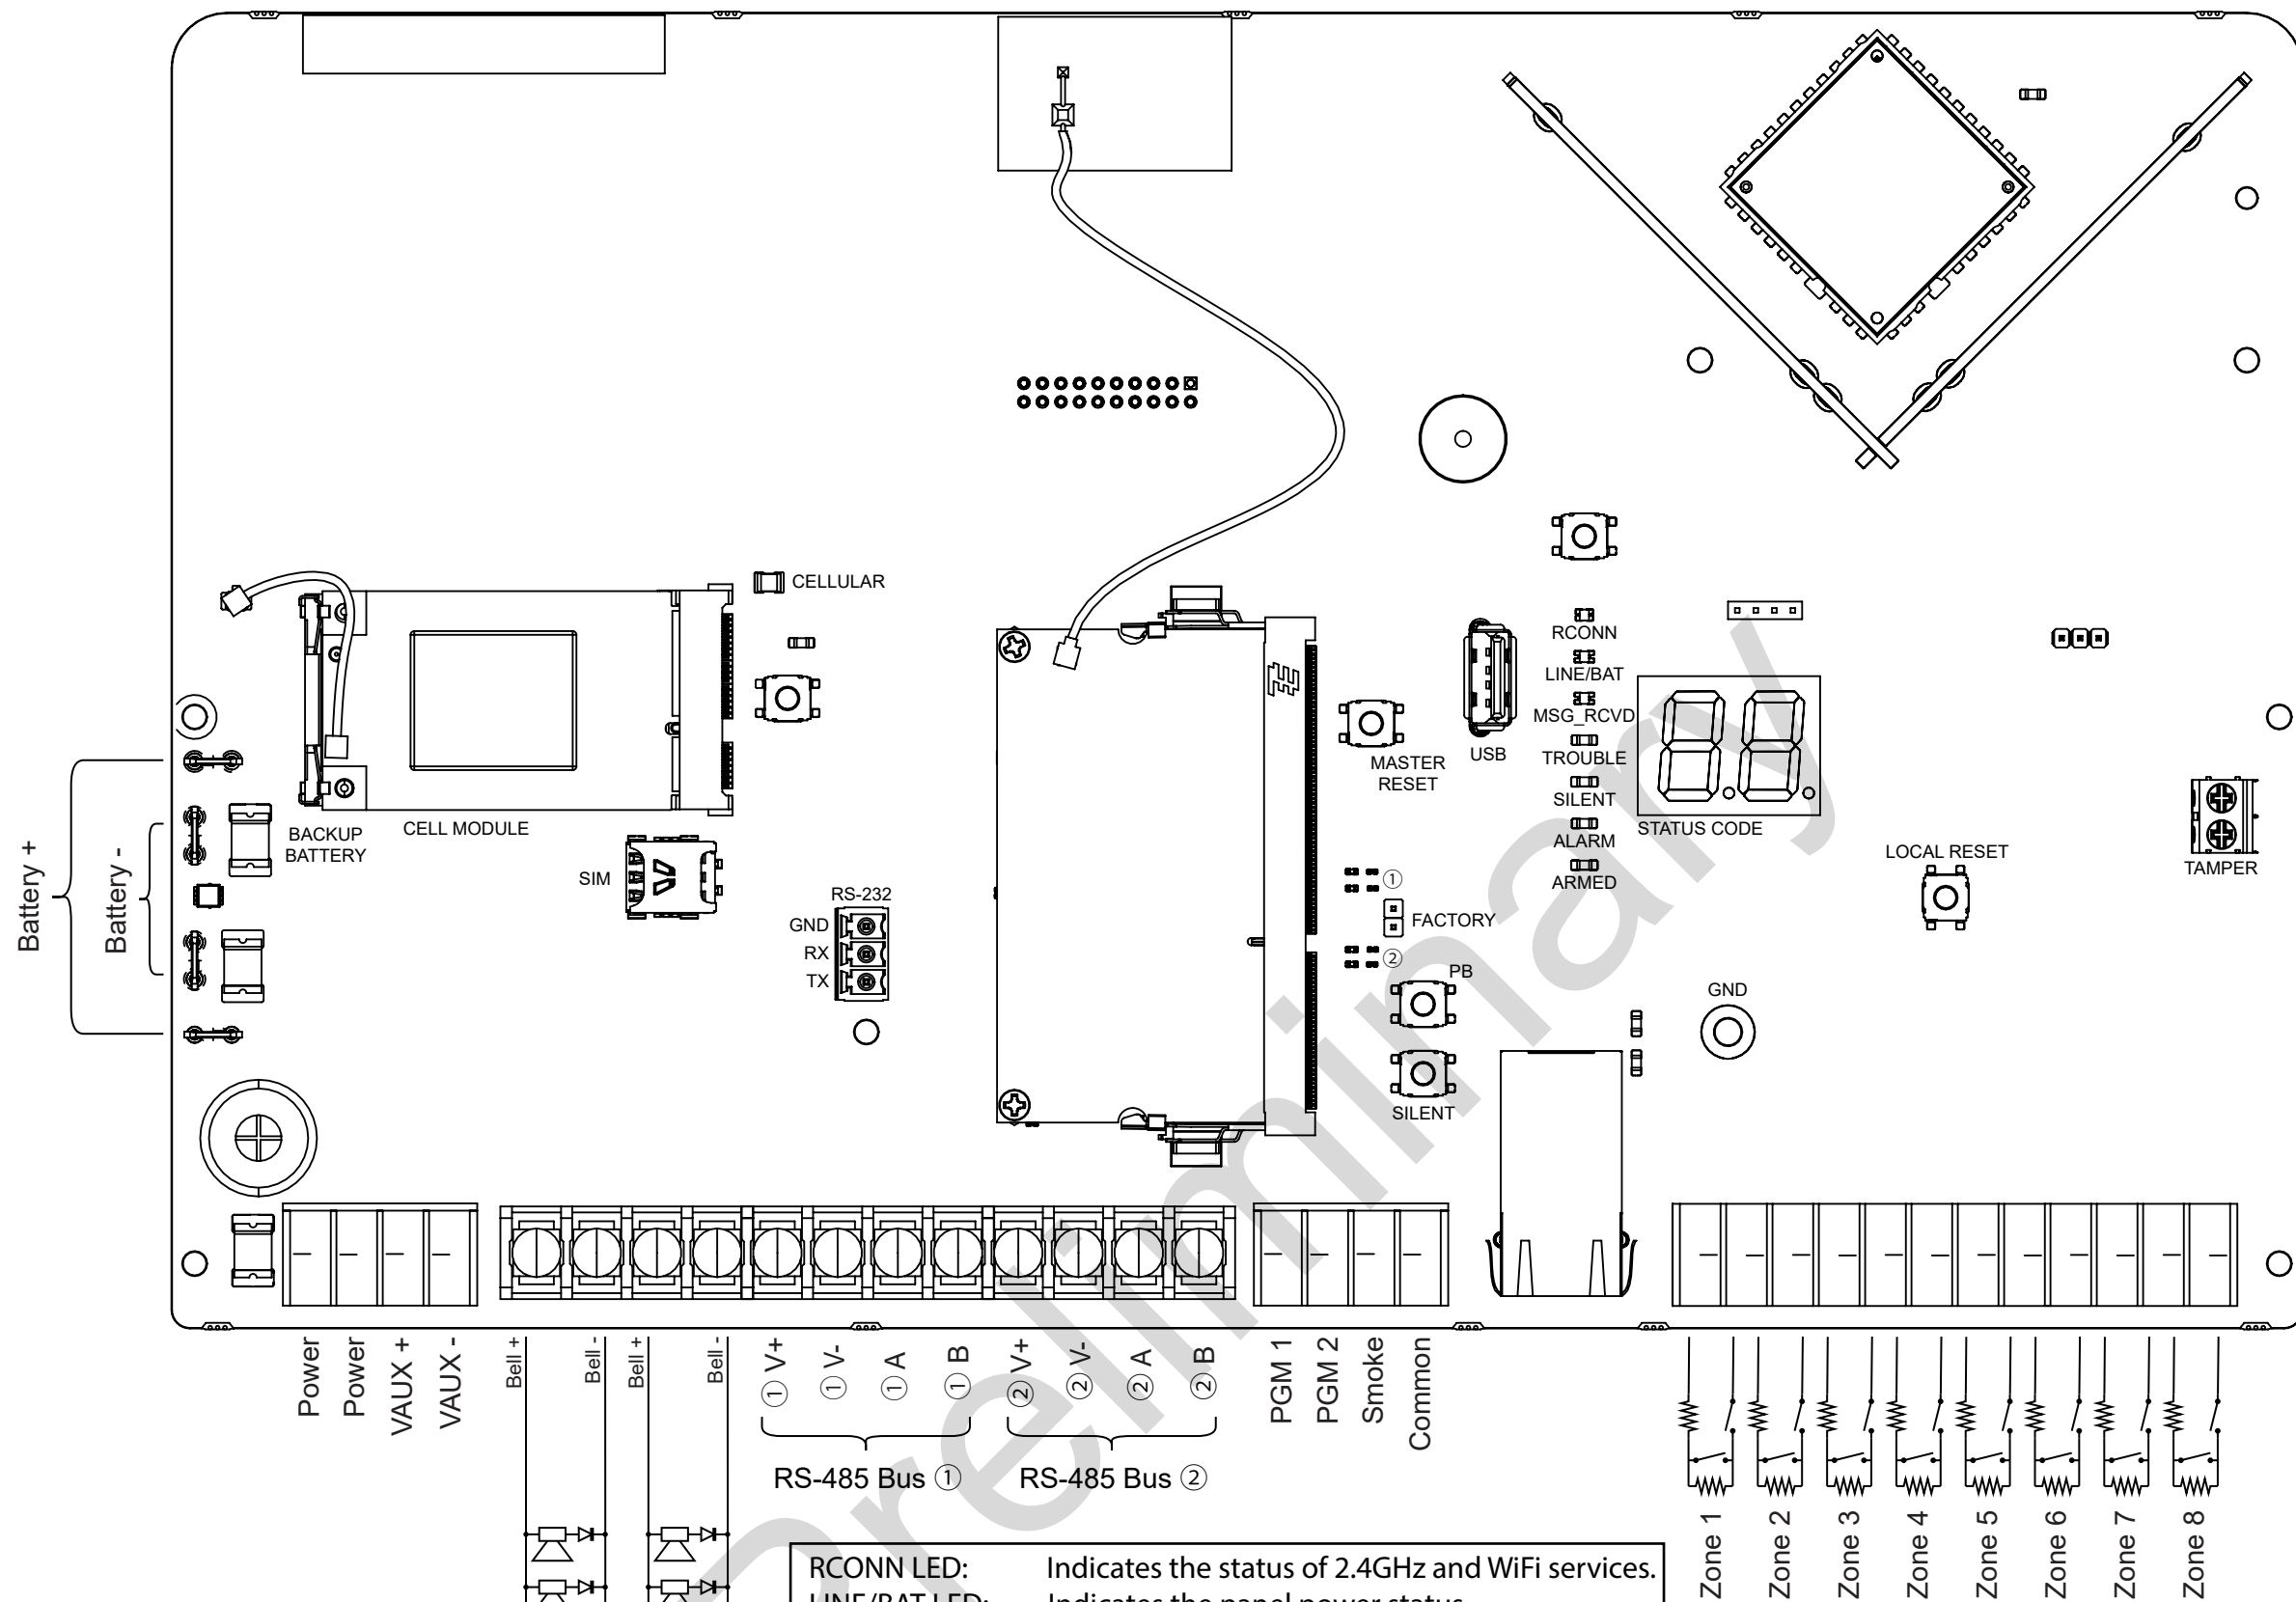

Bell 1

Bell 2

Bell polarity is in the alarm state

RCONN LED: Indicates the status of 2.4GHz and WiFi services.

LINE/BAT LED: Indicates the panel power status.

MSG_RCVD LED: Indicates when wireless or wired messages are received by the panel.

TROUBLE LED: Indicates the status of panel trouble conditions.

SILENT LED: Indicates if the sounder is silenced.

ALARM LED: Indicates the current alarm status.

ARMED LED: Indicates the current arming status.

CELLULAR LED: Indicates the status of the cellular modem.

RS-485 ①/② LED: Indicates inbound messages on the RS-485 buses.

ETHERNET: Indicates ethernet connected and transmitting/receiving data.