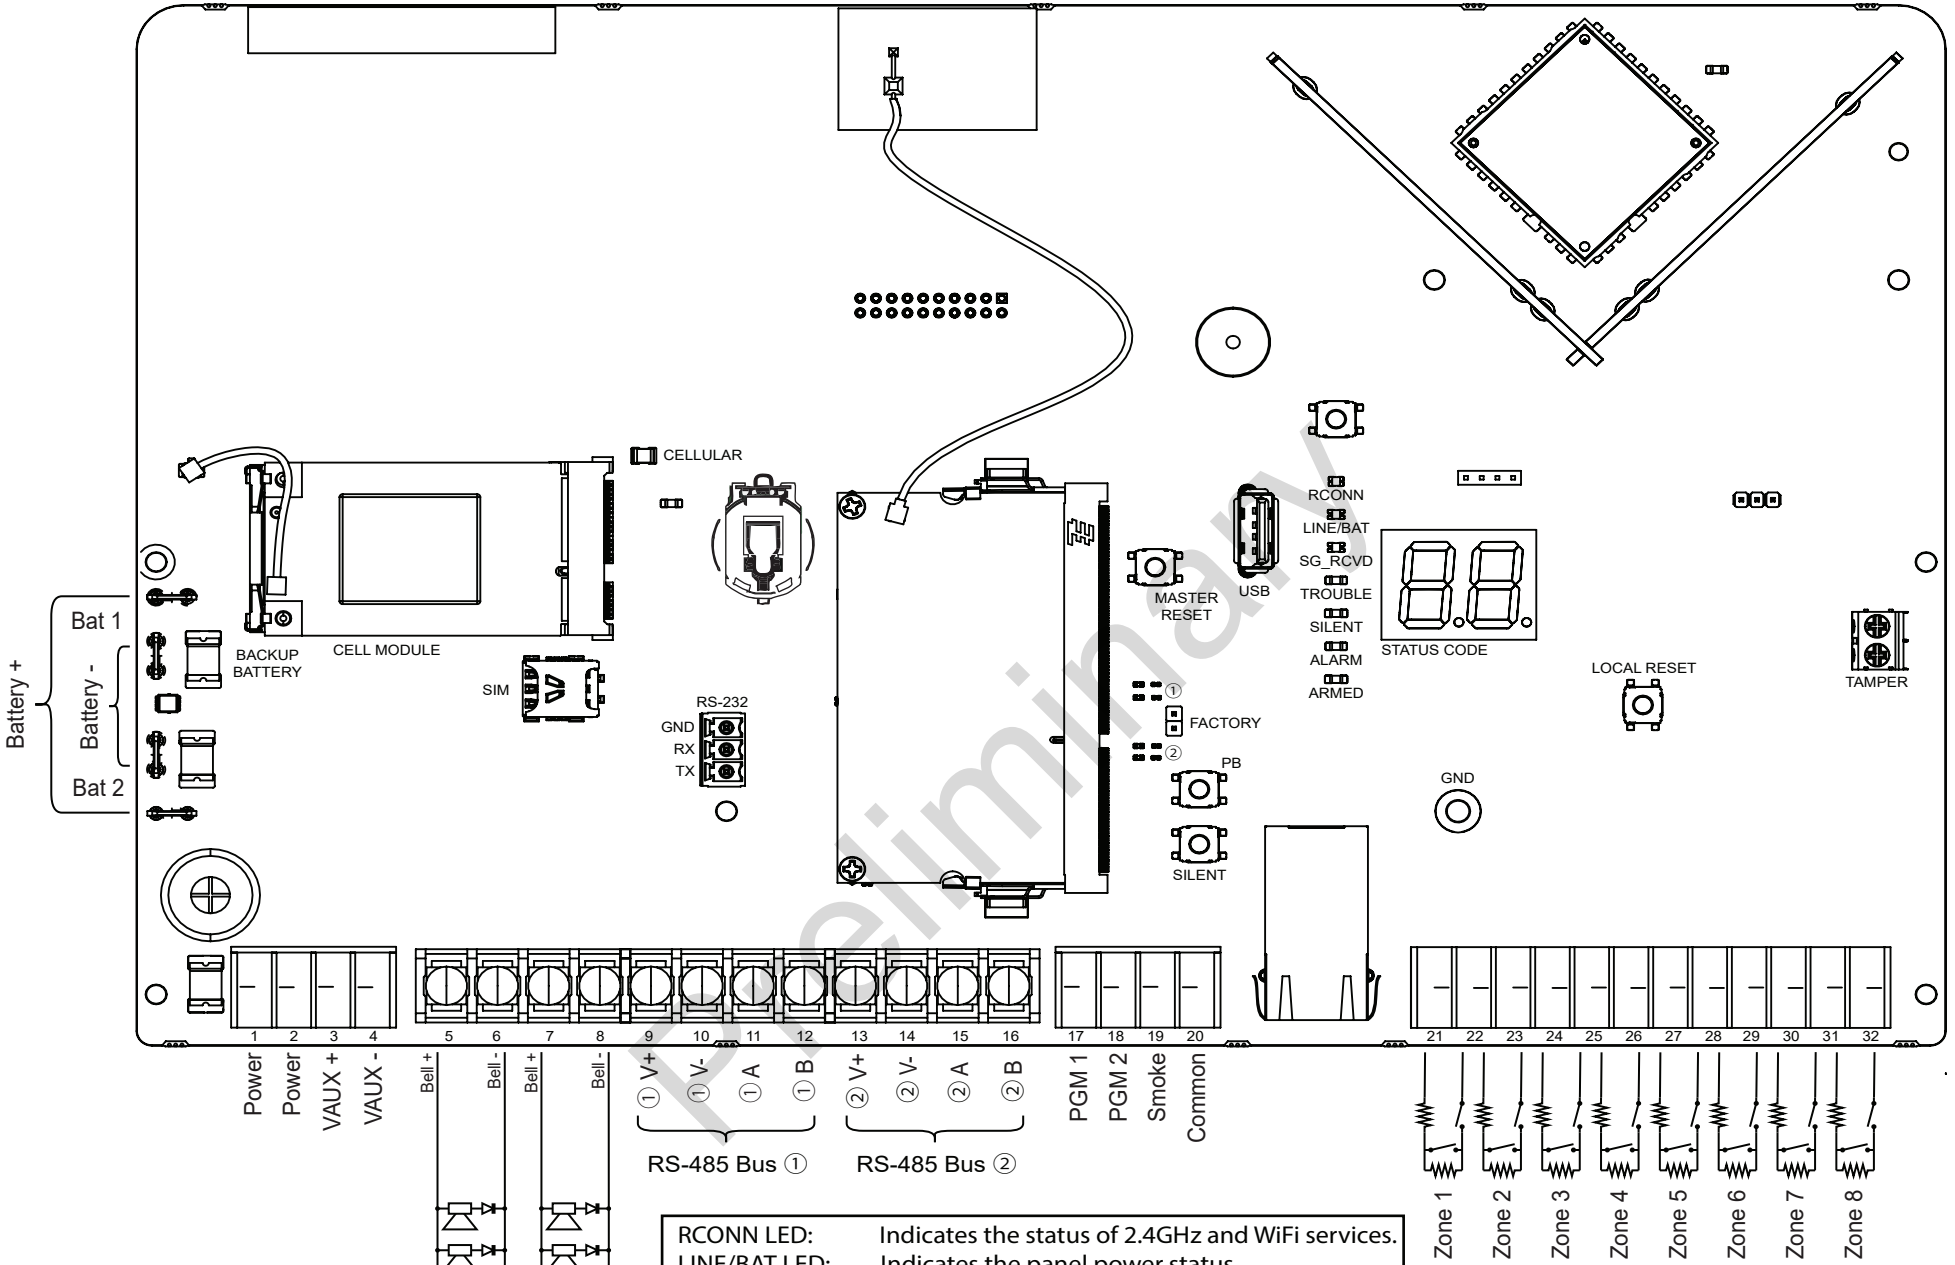


RCONN LED:	Indicates the status of 2.4GHz and WiFi services.
LINE/BAT LED:	Indicates the panel power status.
MSG_RCVD LED:	Indicates when wireless or wired messages are received by the panel.
TROUBLE LED:	Indicates the status of panel trouble conditions.
SILENT LED:	Indicates if the sounder is silenced.
ALARM LED:	Indicates the current alarm status.
ARMED LED:	Indicates the current arming status
CELLULAR LED:	Indicates the status of the cellular modem
RS-485 ①/② LED:	Indicates inbound messages on the RS-485 buses.

Preliminary