

EN1238D EchoStream® Double Condition Pendant Transmitter

Installation Instructions - 05603D

1 Overview


The EN1238D is a two button pendant transmitter, able to send two conditions. The EN1238D must be used with an EchoStream EN4000 or EN4200 serial receiver or the EN6040 network coordinator. In addition, the application controller (e.g. control panel) must be designed to accept the two conditions.

1.1 Inovonics Wireless Contact Information

If you have any problems with this procedure, contact Inovonics Wireless technical services:

- E-mail: support@inovonics.com
- Phone: (800) 782-2709

1.2 EN1238D Components

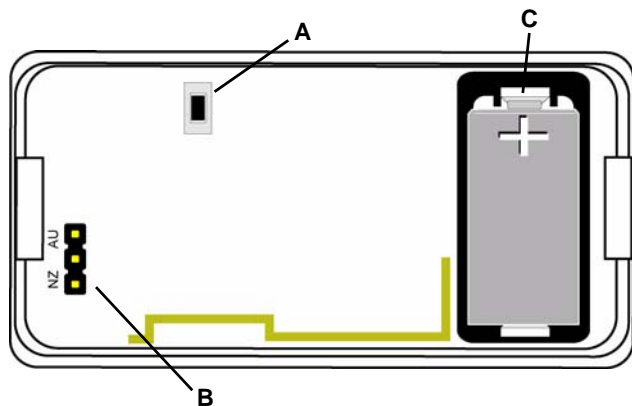

1.3 EN1238D components

- A Reset button
B Frequency band selection pins
C Battery

2 Installation and Startup

2.1 Install/Replace the Battery

1. Pry the housing apart at either end and pull the two halves apart.
2. If replacing a battery, remove the old battery.
3. Install the new battery.
4. Press the **Reset** button to initialize the transmitter.

2.2 Select the Frequency Band

EchoStream products are able to use a range of radio frequencies, and must be configured for your geographic area. To configure the transmitter:

1. Pry the housing apart at either end and pull the two halves apart.
2. Place a selection jumper on the appropriate frequency band selection pins.
 - Leave the jumper off the pins to set the frequency range to 902-928 MHz for North America.
 - Place the jumper on the bottom pins, marked NZ, to set the frequency range to 921-928 MHz for New Zealand.
 - Place the jumper on the top two pins, marked AU, to set the frequency range to 915-928 MHz for Australia.
3. Press the **Reset** button to complete configuration.

Caution: When pressing the **Reset** button, make sure you don't also touch the frequency band selection pins. Touching the frequency band selection pins while pressing the **Reset** button can inadvertently set the pendant to the wrong frequency band.

2.3 Register the EN1238D

The EN1238D must be registered with the system in order to be monitored and supervised. When supervised, the EN1238D will send a check-in message to the serial receiver or network coordinator.

Pendants using the 868MHz frequency range for Europe will send a check-in message every 12 minutes; all other transmitters will send a check-in message every three minutes.

Each pendant has a unique factory-programmed identification number. Refer to the control panel's installation instructions for details on registering a transmitter.

1. When prompted by the receiver to reset transmitter, press the **Reset** button.
2. Replace the cover.

3 Operation

Caution: The EchoStream system should be tested regularly to ensure operation. To test the system, activate both EN1238D conditions and ensure an appropriate response.

3.1 Activating EN1238D Conditions

The EN1238D can send two different conditions. To send the first condition, press and hold either the left or the right pendant button for one second; to send the second condition, press and hold both buttons simultaneously for one second.

Condition signals are transmitted multiple times and are indicated by the blinking transmission LED. When the buttons are released, the transmitter sends an condition restoral signal. To test a transmitter, activate the condition by pressing the button(s). Inovonics Wireless recommends you test the transmitter at least once per week.

Printing Instructions

1. Print Duplex
2. Align and orient back page to match front page.
3. Cut on dashed line
4. Fold cutsheet in half along the 8.5" axis.

3.2 Converting the EN1238D Belt Clip

If you'd like to convert the EN1238D belt clip to a belt loop, secure the bottom of the belt clip to the housing with a coarse thread screw.

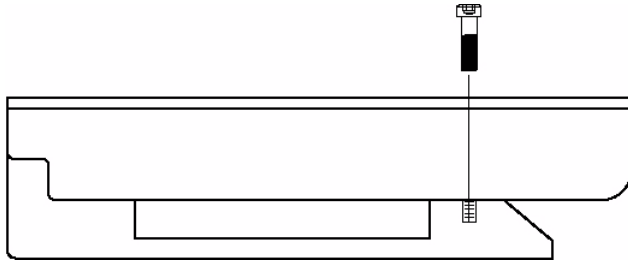


Figure 1 Use a coarse thread screw to secure the belt clip

4 Specifications

Specifications Typical battery life:

3-5 years Battery type (BAT608): Panasonic CR2 or equivalent

Operating environment 0 to 60°C (32 to 140°F), noncondensing

Note: Specifications and data are subject to change without notice.

5 Television and Radio Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

6 FCC Part 15 and Industry Canada Compliance

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

7 Warranty and Disclaimer

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Inovonics Wireless Corporation ("Inovonics") warrants its products ("Product" or "Products") to conform to its own specifications and to be free of defects in materials and workmanship under normal use for a period of thirty-six (36) months from the date of manufacture. Within the warranty period, Inovonics will repair or replace, at its option, all or any part of the warranted Product. Inovonics will not be responsible for dismantling and/or reinstallation charges. To exercise the warranty, the User ("User", "Installer" or "Consumer") must work directly through their authorized distributor who will be given a Return Material Authorization ("RMA") Number by Inovonics. Details of shipment will be arranged directly through the authorized distributor.

This warranty is void in cases of improper installation, misuse, failure to follow installation and operating instructions, alteration, accident or tampering, and repair by anyone other than Inovonics. This warranty is exclusive and expressly in lieu of all other warranties, obligations or liabilities, whether written, oral, express, or implied. There is no warranty by Inovonics that Inovonics product will be merchantable or fit for any particular purpose, nor is there any other warranty, expressed or implied, except as such is expressly set forth herein. In no event shall Inovonics be liable for an incidental, consequential, indirect, special, or exemplary damages, including but not limited to loss of profit, revenue or contract, loss of use, cost of down time, or interruption of business, nor any claim made by distributor's customers or any other person or entity.

This warranty will not be modified or extended. Inovonics does not authorize any person to act on its behalf to modify or extend this warranty. This warranty will apply only to Inovonics Products. Inovonics will not be liable for any direct, incidental or consequential damage or loss whatsoever, caused by the malfunction of Product due to products, accessories, or attachments of other manufacturers, including batteries, used in conjunction with Inovonics Product.