

EN5060 Locator

Installation and Operation Manual

1 Overview

When deployed as part of an Inovonics mobile duress or senior living system, EN5060 locators help determine precise floor and room location for alarm events to improve response times.

1.1 Inovonics Contact Information

▶ For product and installation videos visit us at www.inovonics.com/videos or use the QR code below.



If you have any problems with this procedure, contact Inovonics technical services:

- E-mail: support@inovonics.com.
- Phone: (800) 782-2709; (303) 939-9336.

1.2 EN5060 Locator

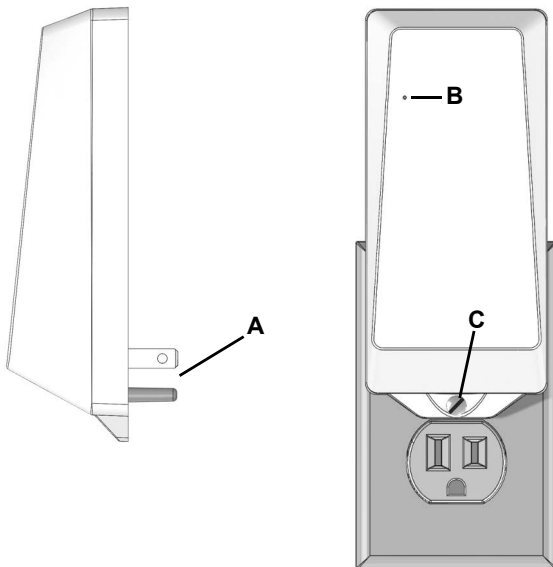


Figure 1 EN5060 locator
A Outlet prongs **B** Power LED **C** Outlet security screw

2 Installation and Startup

2.1 Installation Notes

- These products are designed to be maintained by professional security technicians from Inovonics factory-trained partners.
- Products are tested for indoor use.
- All products should be manually tested weekly.

2.2 Install the EN5060 Locator

Note: Locators must be registered with the site prior to mounting. Refer to the *Mobile Duress User Manual* for registration instructions and contact Inovonics technical services if you require assistance.

U.S. installations must use the outlet security screw to secure the locator to the outlet; Canadian installations must not use the security screw.

U.S. Installations

1. Remove the outlet cover's mounting screw, leaving the outlet cover in place.

Note: The outlet must be a NEMA-5 three-prong with ground (hot-neutral-ground) 125V AC 5-15 or 5-20 amp outlet; if the installation requires a back-up power source, ensure the outlet is powered by an uninterruptable power supply.

Note: Make sure the outlet is located away from metal and neither behind furniture nor a door; do not mount the locator on a power strip.

2. Plug the locator into the top outlet.
3. Use the included outlet security screw to secure the locator to the outlet.
4. Ensure the locator's power LED lights solid green.

Canadian Installations

1. Plug the locator into a suitable outlet.

Note: The outlet must be a NEMA-5 three-prong with ground (hot-neutral-ground) 125V AC 5-15 or 5-20 amp outlet; if the installation requires a back-up power source, ensure the outlet is powered by an uninterruptable power supply.

Note: Make sure the outlet is located away from metal and neither behind furniture nor a door; do not mount the locator on a power strip.

2. Ensure the locator's power LED lights solid green.

3 Specifications

Housing: 2.47" x 5.58" x 2.20" (63 mm x 142 mm x 56 mm).

Weight: 6.3 oz (179 g).

Operating environment: 32 to 113°F (0 to 45°C), 90% relative humidity, non-condensing.

Power requirement: Standard 115-120VAC 50-60Hz wall socket.

Operating frequency: 902-928 MHz.

Bluetooth frequency: 2.402 GHz to 2.480 GHz.

Check in time: Three minutes.

Regulatory: FCC Part 15, Subpart C, RSS-247 Issue 2, RoHS Directive 2015/863.

UL certification: UL and cUL Listed to UL 62368-1, audio/video, information and communication technology equipment.

Note: Inovonics supports recycling and reuse whenever possible. Please recycle these parts using a certified electronics recycler.

4 Regulatory Compliance

4.1 Television and Radio Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful



interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4.2 FCC Part 15 and Innovation, Science and Economic Development Canada (ISED) Compliance

This device complies with part 15 of the FCC Rules, and ISED license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

4.3 Radiation Exposure Limits

FCC

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm during normal operation and must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme avec ISED RSS-102 des limites d'exposition aux rayonnements définies pour un environnement non contrôlé. Cet émetteur doit être installé à au moins 20 cm de toute personne et ne doit pas être colocalisé ou fonctionner en association avec une autre antenne ou émetteur.